

Size	Rated voltage	Frequency	Power	Highest rotating speed	Net Weight
	(V)	(Hz)	(P)	(r/min)	
18	200-240	50-60	90W	850	5.7

Thank you for choosing our innovative product Please carefully read and keeps the instruction manual for future reference.

Page 1

Method of Installation

Installation of the motor and remote control holder on the wall


- a. Remove the motor from the packaging.
- b. Place the wall fan at the desired place for installation, the drill for holes on the wall with the measurement shown in (figure 1).
- c. Align the four holes on the DC motor frame to the four holes on the wall, then insert the expansion bolt into the four holes and insert the four M5*40 screws into the holes and tighten securely (figure 3).
- d. Place the remote control holder at the desired place for installation, then drill four holes on the wall with measurement shown in (figure 2). Then take the M3*20 screws and tighten securely.

Assembly of Net Cover and Fan Blade

- a. Assembly of rear net covers:
 - Remove the Nut of the blade and four M5*10 screws from the front of motor
 - Align the four small holes of the rear net cover to the four screw holes of the motor.
 - Use the four m5*10 screws to secure the rear cover to the motor (figure 4).

b. Assembly of blade:

- Remove the protective sleeve on the motor shaft.
- Insert the center of the blade into the shaft and take the plastic Nut and tighten on an anticlockwise direction (figure 5).
- c. Assembly of front cover:
 - Loosen the screw at the bottom of the net cover.
 - Place the security lock downwards, then insert the front cover into corresponding Position of the net frame.
 - Adjust the alignment of the front and rear net cover carefully.
 - Then tighten the screw of of the security lock. (figure 6)

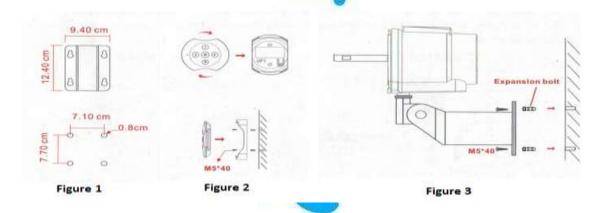

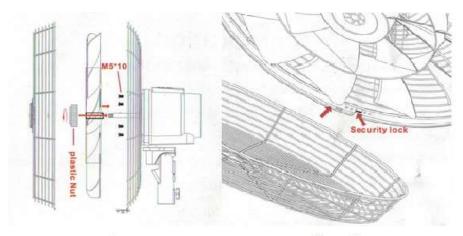



Figure 4&5

Figure 6

Function Control Panel Display:

- **1. ON/OFF:** In standby mode, press this button to start the fan with normal wind, default at third level. The indicator light of the digital screen will display to the number 3, other lights are off.
- **2. SPEED:** Air volume UP/Down (6 levels), note: the indicator light of the digital screen display the numbers 1 to 6.
- **3. TIMER:** Press the Timer button, the indicator light of the digital screen is on, press air volume UP/Down to adjust the timer (timing range is 1 to 9 hours) the indicator light of the digital screen will light up when timing time starts. The flashing number indicates the remaining time left. A quick press of the timer button can be starting the timer mode again.
- **4. SWING:** Press the swing button to activate natural wind mode, the indicator light of the digital screen will light up. To stop press swing button again
- **5. FEEL:** Press the feel button to activate swing mode, the indicator light of the digital screen will light up. To stop, press Feel button again.
- **6. SLEEP:** Press the sleep button to activate sleep mode, the indicator light of the digital screen will light up. When the digital screen is showing number zero, the RPM is at its lowest.
- **7. REST Mode Display:** When the control panel has been idle for 2 minutes, all lights will turn off and automatically enter rest mode, press any key to display the current mode of the fan. This does not turn off or cancel the current fan mode.

Function Remote Control: Figure 8

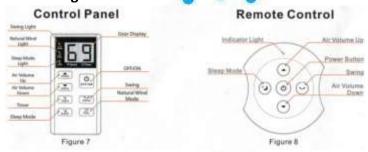

Page 3

Elevation Angle Adjustment

1. Gentle press the motor and net part lightly up or down to adjust desirable height.

Elevation Angle Adjustment

1. The of the remote control has a magnet that stores away on the center of the fan grill when not in use for convenient access at any time.

WARNING


- 1. Before use, please check whether the voltage used is the same as the voltage marked by this product.
- 2. Do not connect to power when the fan is not fully assembled. Ensure all power is off and power cable and plug are unplugged from the power socket.
- 3. Do not use wet hands to pull the power plug to avoid the risk of electric shock.
- 4. Do not place fab on slopping floor.
- 5. Please avoid high temperature, high humidity and items that can be easily by the (eg. Acid, alkali, oil, fluids, curtains etc.)
- 6. Infants and elderly persons should not use strong wind for a long period.
- 7. Do not insert your fingers or sharp objects into the net when fan is on.
- 8. Children should use the product under adult supervision to prevent any accidents.
- 9. Before using the fan, inspect the power cord and power plug are not damaged, please immediately contract the supplier for a replacement.
- 10. If the fan is not being used for a long period of time, please remove the battery of the remote control and keep it away from moisture.

Maintenance:

- Turn off the power before cleaning the product.
- 2. Do not use any grinding tools and solvents that can damage the surface.
- 3. To clean parts of the (excluding the motor), wash it with detergent and then wipe with a dry cloth and allow some time to ensure all parts are fully dry before reassembling the fan.
- 4. It is recommended that the product be inspected and cleaned annually to extend the service life of the product.



Identity Verification

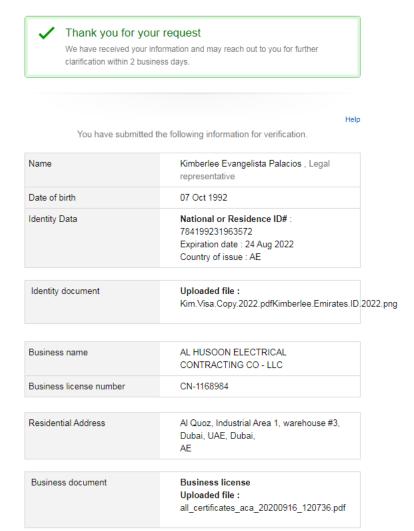

Disclaimer:

- 1. The instruction manual has been carefully reviewed and the manufacturer reserves the right of explanation.
- 2. It is not required to inform or notify any persons, if the product is subject to technical improvements in the future.

